SITRANS F M Verificator

Function

All electromagnetic flowmeters are based on Faraday's law of induction:

 $U_M = B \cdot v \cdot d \cdot k$


 $U_{\rm M}$ = Measured voltage induced in the medium perpendicular to the magnetic field and the flow direction. The voltage is tapped at two point electrodes.

 ${\sf B}$ = Magnetic flux density which permeates the flowing medium perpendicular to the flow direction.

v = flow velocity of medium

d = internal diameter of metering tube

k = proportionality factor or sensor constant

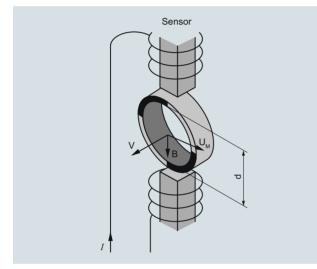



An electromagnetic flowmeter generally consists of a magnetically non-conducting metering tube with an internal electrically non-conducting surface, magnet coils connected in series and mounted diametrically on the tube, and at least two electrodes which are inserted through the pipe wall and are in contact with the measured medium. The magnet field coils through which the current passes generate a pulsed electromagnetic field with the magnetic flux density B perpendicular to the pipe axis.

This magnetic field penetrates the magnetically non-conducting metering tube and the medium flowing through it, which must have a minimum electrical conductivity.

According to Faraday's law of induction, a voltage U_M is generated in an electrically conducting medium, and is proportional to the flow velocity v of the medium, the magnetic flux density B, and the distance between the electrodes d (internal diameter of pipe).

The signal voltage U_M is tapped by the electrodes which are in contact with the medium, and passed through the insulating pipe wall. The signal voltage U_M which is proportional to the flow velocity is converted by an associated transmitter into appropriate standard signals such as 4 to 20 mA.

SITRANS F M diagnostics

The diagnostic functions are all internal tools in the meter:

- Identification in clear text and error log
- Error categories: function; warning; permanent and fatal errors
- Transmitter self-check including all outputs and the accuracy
- Sensor check: coil and electrode circuit test
- Overflow
- Empty pipe: partial filling; low conductivity; electrode fouling

SITRANS F M Verificator (MAG 5000 and 6000)

The SITRANS F M Verificator is an external tool designed for MAG 5000 and MAG 6000 with MAG 1100, MAG 1100 F, MAG 3100, MAG 3100 P or MAG 5100 W sensors to verify the entire product, the installation and the application.

The goal is to improve operation, reduce downtime and maintain measurement accuracy as long as possible.

The SITRANS F M Verificator is highly advanced and carries out the complex verification and performance check of the entire flowmeter system, according to unique Siemens patented principles. The whole verification test is automated and easy to operate so there is no opportunity for human error or influence. The system is traceable to international standards and tested by WRc (Water Research Council).



SITRANS F M Verificator

- Stand alone Verificator to measure a number of selected parameters in the flow sensor and a transmitter which affects the integrity of the flow measurement
- Up to 20 measurements can be stored in the Verificator
- The Verificator can be connected via a serial cable to a PC enabling download of the data. A Windows program enables printing and management of verificator reports.

Verification - Steps

Verification of a SITRANS F M flowmeter consists of the following test routines:

- 1. Transmitter test
- 2. Flowmeter and cable insulation test
- 3. Sensor magnetism test

Flow Measurement

SITRANS F M

SITRANS F M Verificator

1. Transmitter test

The transmitter test is the traditional way of on-site testing on the market and checks the complete electronic system from signal input to output.



Transmitter test

Using the excitation power output, which is generated to drive the magnetic field of the sensor, the verificator simulates flow signal to the transmitter input. By measuring the transmitter outputs the verificator calculates its accuracy against defined values. Test includes:

- Excitation power to drive the magnetic field
- · Signal function from signal input to output
- · Signal processing gain, offset and linearity
- Test of analogue and frequency output
- 2. Insulation test




Flowmeter insulation test

The verification test of the flowmeter insulation is a "cross talk" test of the entire flowmeter which ensures that the flow signal generated in the sensor is not affected by any external influences.

In the "cross-talk" test the verificator generates a high voltage disturbance within the coil circuit and then looks for any "cross-talk" induced in the flow signal circuit. By generating dynamic disturbances close-coupled to the flow signal, the flowmeter is tested for noise immunity to a maximum level:

- EMC influence on the flow signal
- · Moisture in sensor, connection and terminal box
- Non-conductive deposit coating the electrodes within the sensor
- Missing or poor grounding, shielding and cable connection.
- 3. Sensor magnetism test

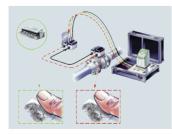

Sensor magnetism test

The verification of the sensor magnetism is a "boost" test of the magnetic field coil. The test ensures that the magnetism behaviour is like the first time, by comparing the current sensor magnetism with the "fingerprint" which was determined during initial calibration and stored in the SENSORPROM memory unit. In the "boost" test the verificator changes the magnetic field in certain pattern and with high voltage to get quick stable magnetic condition. This unique test is fulfilled without any interference or compensation of surrounding temperature or interconnecting cabling.

- · Changes in dynamic magnetic behaviour
- Magnetic influence inside and outside the sensor
- Missing or poor coil wire and cable connection

Certificate

The test certificate generated by a PC contains:

- Test result with passed or failed
- Installation specification
- · Flowmeter specification and configuration
- Verificator specification with date of calibration ensuring traceability to international standards.

Customer:											
	_				MAGFL	0°	Identificatio	on:			
Name					TAG No.	./Na	ame	0			
Address					Sensor (7.04	E634		
					Sensor S	Seri		_	701H142		
								_			
								_	E692		
Phone					Transmi	itte	er Serial No.	109	418N080		
Email					Location	n		_			
Results:		Verifi	ication file name o	or N	0. F	T-1	103FT2801				
			smitter				sed				
		Sens	or Insulation		E	ass	sed				
			Magnetic	Circ	cuit <u>F</u>	ass	sed				
Velocity			Current Output			Т			Frequency Ou	itput	
Theoretical		Theoretical	Actual	D	eviation		Theoretical		Actual	Deviation	
0.5m/s		4.800mA	4.802mA	0.	25%		0.500kHz		0.501kHz	0.11%	
1.0m/s		5.600mA	5.601mA	0.	08%		1.000kHz		1.001kHz	0.07%	
3.0m/s		8.800mA	8.804mA	0.	08%	3	3.000kHz		3.004kHz	0.14%	
		Current Outpu	t 4-20mA			F	Frequency Out	tpu	t 0-10kHz		
Transmittor	Sott	ings:				6	Sensor Deta	ails			
Transmitter Settings: Basic Omax			2.00000 m ³ /h			1	Size			DN 15 1/2 IN	
Basic Qmax. Flow Direction			2.00000 m ⁻ /n Positive			Size			5 1/2 IN		
		ow Cut-off	1.50%				Cal. Factor		0.16	531426	
E	impty	pty Pipe ON					Cal. Factor	0.1		331420	
		rrent Output ON (4-20mA)									
Output C	urrei	nt Output	ON (4-20mA)				Correction F	act	or 1.0		
		nt Output Constant					Correction F	act	or <u>1.0</u>		
. т	Time (ON (4-20mA) 5.0 Sec. Error Level				Correction F		or <u>1.0</u> 12.5	Hz	
. T R	Time (Relay	Constant Output	5.0 Sec.							Hz	
. T R C F	Time (Relay Digita Frequ	Constant Output I Output ency Range	5.0 Sec. Error Level Pulse N/A				Excitation Fr	req.	12.5		
, T R C F T	Time (Relay Digita Trequ Time (Constant Output I Output ency Range Constant	5.0 Sec. Error Level Pulse N/A N/A				Excitation Fr	req.	12.5 ails (083F50	60)	
, T R C F T V	Time (Relay Digita Trequ Time (/olum	Constant Output I Output ency Range Constant te/pulse	5.0 Sec. Error Level Pulse N/A N/A 1.0 I/p			1	Excitation Fr	req.	12.5 ails (083F50 1079	60) 920N490	
T R F T V P	Time Relay Digita Trequ Time Volum Pulse	Constant Output I Output ency Range Constant	5.0 Sec. Error Level Pulse N/A N/A			<u>\</u>	Excitation Fr	req.	12.5 ails (083F50	60) 920N490	
T R F T V P P	Time (Relay Digita Time (Jolum Pulse Pulse	Constant Output I Output ency Range Constant he/pulse width polarity	5.0 Sec. Error Level N/A N/A 1.0 l/p 0.51999998 sec. Positiv			<u>\</u>	Excitation Fr	Det	12.5 ails (083F50 1079 946	<u>60)</u> 920N490 83	
T R F T V P	Fime (Relay Frequ Fime (Jolum Pulse Pulse Pulse	Constant Output I Output ency Range Constant he/pulse width polarity pefore test	5.0 Sec. Error Level Pulse N/A N/A N/A 1.0 l/p 0.51999998 sec.			2	Excitation Fr Verificator D Serial No. Device No.	req. Det	12.5 ails (083F50 1079 946 n 1.40	<u>60)</u> 920N490 83	
T T T T T T T T T T T T T T T T T T T	Fime (Relay Digita Frequ Fime (Jolum Pulse Pulse alue a alue a alue a	Constant Output I Output ency Range Constant Ie/pulse width polarity before test offer test before test	5.0 Sec. Error Level Pulse N/A N/A 1.0 l/p 0.51999998 sec. Positiv 819442.93213 1 819458.92334 1 693.87579 1			2	Excitation Fr Verificator D Serial No. Device No. Software Ver PC-Software	req. Det	12.5 ails (083F50 1079 946 n 1.40 sion 5.01	60) 920N490 83	
T R F T V P P Totalizer 1 va Totalizer 1 va	Fime of Relay Digita Frequ Fime of Jolum Pulse Pulse alue t alue t alue t alue t	Constant Output I Output ency Range Constant te/pulse width polarity polarity before test fifer test before test ifter test	5.0 Sec. Error Level Pulse N/A N/A 1.0 l/p 0.51999998 sec. Positiv 819442.93213 l 819458.92334 l			<u>\</u>	Excitation Fr Verificator E Serial No. Device No. Software Ver	req. Det	12.5 ails (083F50 1079 946 n 1.40 sion 5.01 2019	<u>60)</u> 920N490 83	

Description

SITRANS F M Verificator

- 11 ... 30 V DC, 11 ... 24 V AC, 115 ... 230 V, 50 Hz
- 11 ... 30 V DC, 11 ... 24 V AC, 115 ... 230 V, 60 Hz

Note:

It is mandatory to have the Verificator returned to the factory once a year for check and re-verification.

Article No.

FDK:083F5060

FDK:083F5061